

**Quick Start Guide  
Keysafe products**

digital, retrofittable tube safe lid for use as a key safe for existing wall safes


Smart Access Solutions GmbH  
c/o WERK1, Atelierstr. 29  
81671 München  
Deutschland

info@smart-access-solutions.com  
www.smart-access-solutions.com




**Wake up Keysafe from deep sleep mode**

To save battery power, Keysafe is going to deep sleep mode (A) after 20 seconds of inactivity. The LED (C) is not flashing. To wake up keysafe to operations mode (B) rotate (D) at least 90 degrees to left or right, the LED will start to flash blue.

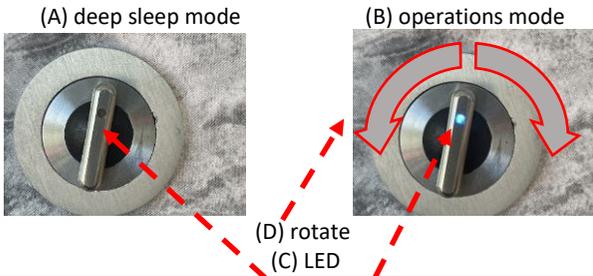

**Insert and remove Keysafe from tube safe**

When the keysafe is unlocked, it can be removed (A) from the tube safe (B). To do this, pull the handle (C). When inserting (A) the keysafe into the tube safe, make sure that the sealing ring (D) is positioned correctly. The keysafe is positioned correctly when it is inserted flat into the tube safe

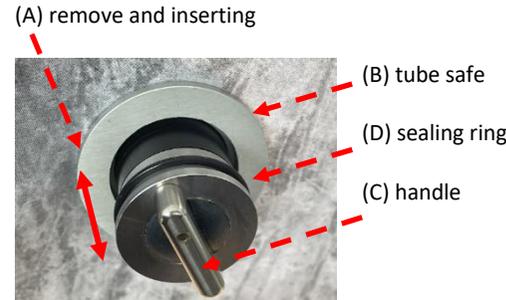

**Lock and unlock the keysafe**


To lock or unlock (A) the keysafe, use the okey smartphone app. Ask your operator for the access data and access rights to lock and unlock the Keysafes.

(A) lock and unlock (B) okey smartphone App



**Remove and re-insert the key ring**

The key ring is held to the Keysafe by a magnet. To remove the key ring (A) from the Keysafe just pull on the key ring (B). To reinsert the key ring, simply put it back in its intended place and make sure that it is firmly connected to the magnet.

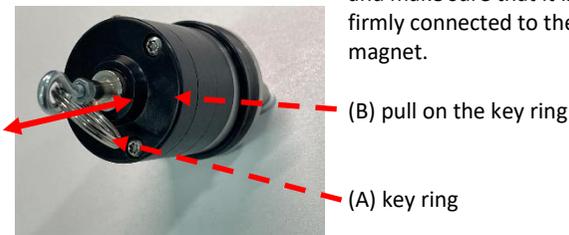

**LED flash and beep code**

The Keysafe can interact by sending optical signals via LED (A) or sending acoustic signals via buzzer (B).

| LED (A)                           | Buzzer (B)                      |   |
|-----------------------------------|---------------------------------|---|
|                                   |                                 | Keysafe is in deep sleep mode                           |
|                                   | Signal low and high             | Keysafe is waking up                                    |
| Flashing blue two times a second  |                                 | Keysafe is in operations mode                           |
|                                   | signal high and low             | Keysafe is going to sleep mode                          |
| Flashing blue three times         |                                 | Keysafe is receiving command to open or close           |
| green (2 Seconds)                 | signal low and high             | Keysafe was opened or closed successfully               |
| red (2 seconds) then flashing red | error signal (2 seconds signal) | Error: Keysafe cannot open or close: The bolt is jammed |

**Error handling**

**Lock is not waking up from deep sleep mode**

- contact your operator to change batteries

**Lock is not found in okey app, although LED is flashing**

- make sure you have access rights to the lock

- refer to the okey smartphone app manual

**LED is flashing red, and buzzer is signaling error Code:**

- carefully rotate and wiggle the Keysafe and try again

- if still not working, contact your operator for maintenance

**Kurzbedienungsanleitung  
Keysafe Produkte**

digitaler, nachrüstbarer Rohrtresor-Deckel zur Verwendung als Schlüsseltresor für bestehende Wandtresore

Smart Access Solutions GmbH  
c/o WERK1, Atelierstr. 29  
81671 München  
Deutschland

info@smart-access-solutions.com  
www.smart-access-solutions.com




**Aufwecken des Keysafes aus dem Tiefschlafmodus**

Um Batteriestrom zu sparen, geht Keysafe nach 20 Sekunden Inaktivität in den Tiefschlafmodus (A). Die LED (C) blinkt nicht. Um Keysafe in den Betriebsmodus (B) zu bringen, drehen Sie (D) mindestens 90 Grad nach links oder rechts, die LED beginnt blau zu blinken.


(A) Tiefschlafmodus

(B) Betriebsmodus

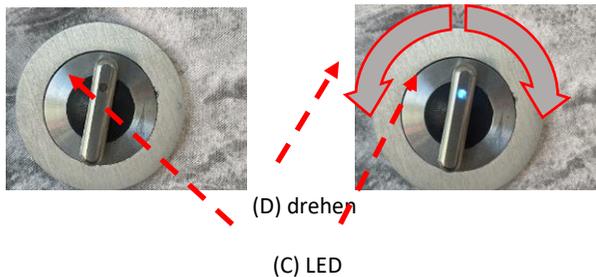

**Keysafe aus dem Rohrtresor entnehmen und einsetzen**

Wenn der Keysafe entriegelt ist, kann er (A) aus dem Rohrtresor (B) herausgenommen werden. Ziehen Sie dazu am Griff (C). Achten Sie beim Einsetzen (A) des Keysafes in den Rohrtresor auf den korrekten Sitz des Dichtungsringes (D). Der Schlüsselsafe sitzt richtig, wenn er flach abschließend in den Rohrtresor eingesetzt ist.

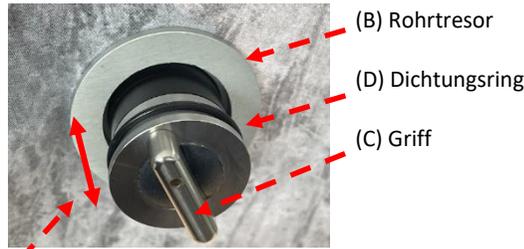


(A) entnehmen und einsetzen

**Verriegeln und Entriegeln**

Um den Schlüsselsafe zu sperren oder zu entsperren (A), verwenden Sie die okey Smartphone-App. Fragen Sie Ihren Betreiber nach den Zugangsdaten und den Zugangsrechten zum Sperren und Entsperrern des Schlüsselsafes.


(A) Verriegeln und Entriegeln

(B) okey smartphone App

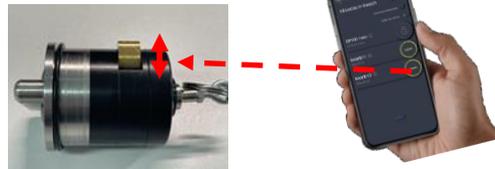

**Schlüsselring abziehen und anstecken**

Der Schlüsselring wird durch einen Magneten am Keysafe gehalten. Um den Schlüsselring (A) vom Keysafe zu entfernen, am Schlüsselring (B) ziehen. Um den Schlüsselring wieder einzusetzen, einfach wieder an seinen vorgesehenen Platz zurückstecken. Stellen Sie sicher, dass er fest mit dem Magneten verbunden ist.

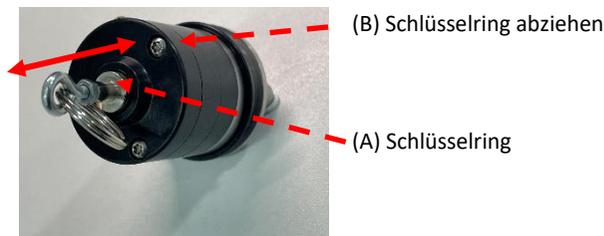

**LED und Signaltöne**

Der Keysafe kann optische Signale über die LED (A) oder akustische Signale über den Summer (B) aussenden.

| LED (A)                                     | Signal (B)                      |  |
|---|---------------------------------|--|
|   |                                 | Keysafe ist im Tiefschlafmodus   |
|   | Signal tief-hoch                | Keysafe wacht auf  |
| Blinkt blau<br>2 mal pro Sek.               |                                 | Keysafe ist im Betriebsmodus   |
|   | Signal hoch-tief                | Keysafe geht in den Tiefschlafmodus  |
| Blinkt dreimal blau                         |                                 | Keysafe empfängt den Befehl zum Öffnen oder Schließen                      |
| Leuchtet grün für 2 Sek.                    | Signal tief-hoch                | Keysafe wurde geöffnet oder geschlossen                                    |
| leuchtet rot für 2 Sek. und blinkt dann rot | Fehlersignal<br>2 Sek. Dauerton | Fehler: Keysafe kann nicht öffnen oder schließen. Der Bolzen ist verklemmt |

**Fehlerhandhabung**

**Das Schloss wacht nicht aus dem Tiefschlafmodus auf**

- Wenden Sie sich an Ihren Betreiber, um die Batterien zu wechseln
- Das Schloss wird in der okey App nicht gefunden, die LED blinkt**
- Stellen Sie sicher, dass Sie Zugriffsrechte auf das Schloss haben
- Lesen Sie das Handbuch der okey Smartphone-App für mehr Infos
- Die LED blinkt rot und der Summer signalisiert einen Fehlercode:**
- Drehen und wackeln Sie den Keysafe vorsichtig und versuchen Sie es erneut
- wenn er immer noch nicht funktioniert, wenden Sie sich an Ihren Betreiber zur Wartung